

# The Inflator



## Tire Inflator



**THE INFLATOR** is a special formula that inflates flat tires to 29 lbs. of pressure and temporarily seals most tread punctures. **THE INFLATOR** eliminates tire changing and the use of tools and jacks. Allowing time for tire repairs at a later date. Saves time and does not affect tire balance. The sealant washes with soap and water.

**Directions:** To obtain best results, tire valve stem must be upright and at the bottom of the tire (6 o'clock position). Remove valve stem cap or extension, if any. Shake can well before using. Screw hose nozzle onto the tire valve. Make sure the hose nozzle and tire valve are in line and not cross threaded. Mis-alignment or cross threading may result in tire valve not opening. Hose nozzle will automatically open tire valve. To release contents of can, depress the button. After desired inflation, remove the hose from the tire valve stem. Affix the yellow sticker to the valve stem. Immediately drive the vehicle 3-5 miles to allow the sealant to form a uniform coating. This will allow the sealant to properly bond to the inner surface of the tire or tube. Before repairing the tire, alert the repairman that this tire contains a highly flammable gas. Release the gas from the tire in a well ventilated area away from open flame. Do not smoke when releasing contents of tire. Repair as needed and refill tire with air. Remove tire completely from rim before welding on rim. In extremely cold weather, warm contents of can by holding it in front of car heater vent, occasionally shaking until contents are near room temperature.

Health	1
Flammability	1
Reactivity	0
Protection	N/A

**Areas of Use:**  
\*vehicles

Appearance and odor.....	White liquid with a faint ammonical odor.
Specific Gravity.....	0.95 - 1.05 (concentrate only)
Propellant.....	Propane
VOC by weight.....	20%
NFPA Fire Rating.....	Flammable

## ONLY OMEGA™

Fairfield, CA 94534  
1-800-571-7347 [www.onlyomega.com](http://www.onlyomega.com) Fax: 707-864-8134